



END TRUCK MAINTENANCE INSTRUCTIONS

1. All wheel bearings part No. WB-4U on under running end trucks are lubricated for the life of the bearing and sealed against moisture and dirt.
2. The lower flange guide rollers part No. SB-4U are Cam follower type construction with Alemite grease fitting located in end of the guide roller stem readily accessible from underside of each end truck Grease every 6 months under normal use.

Part Name	Part No.	Quantity Per Each End Truck
Truck Frame	TF-6U	1
Plain Wheel	PW-5U	4
"C" Wheel Washer	CW-7U	4
Wheel Bearing	WB-4U	4
Wheel Axle	WA-3U	4
Axle Lock Washer	AW-7U	4
Axle Nut	AN-7U	4
Side Roller Bearing	SB-4U	2